




---

# MULTI TRAILER 3 PLUG BRACKET OEM TOWBAR

---

TLR714802

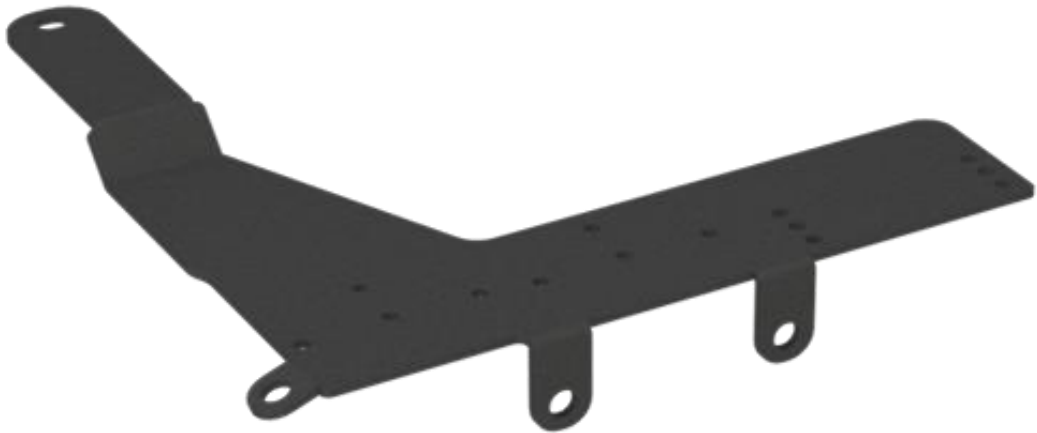

SUITED TO:  
**ISUZU MUX RJ SERIES**



## PRE-INSTALLATION



Read through this installation guide before proceeding.



Fitting time is approx. 30 minutes.



Basic spanner and socket set, Phillips head screwdriver.

FITTING KIT	
QUANTITY	PART
1	TLR714802
1	TLR710010 Camera Plug Bracket
1	TLR710008 Adapter Plate
6	M4 x 20 mm SS Pan Phillips Head
2	M4 x 10 mm SS Pan Phillips Head
8	M4 SS Nyloc Nut
1	M8 x 20 mm Button Head Socket
1	M8 SS Nyloc Nut
1	M8 x 20 mm Flat Washer
1	Tie Cable 150 mm

### NOTE:

This TLR Products bracket allows for mounting 7/12 pin, 2 x Anderson plugs, 1 x camera outlet, airbags, trailer break away.

We recommend doing all the wiring before mounting bracket to the vehicle.



## FITTING INSTRUCTIONS

1. Decide which plugs/ fitting's you are fitting and orientation of the accessories. We recommend pre-wiring all plugs and fittings before installation.
2. If you are fitting a rear-view camera plug, use additional mounting bracket supplied, in the case you are fitting a "Safety Dave Style" camera plug, you will need to use the supplied adapter plate for installation, refer to **photo 1**.
3. Using supplied M4 hardware, mount additional accessory plugs to the TLR Product Bracket.
4. Remove the OEM 7/12pin trailer plug from the OEM towbar location.
5. Loosely fit TLR Products Trailer Plug Bracket to towbar tag "as per **photo 2** using M8 hardware supplied.  
*NOTE: we have noticed slight variation, may need to clearance hole.*
6. Fit mounting bracket and 7/12pin trailer plug to the OEM trailer plug location as per **photo 3**
7. Tighten M8 mounting bolt in location and ensure all other fixings are secure.



PHOTO 1



PHOTO 2



PHOTO 3



TLR Products  
65 Northville Drive  
Barnsley NSW 2278



hello@tlrproducts.com.au  
www.tlrproducts.com.au



instagram.com/tlrproducts  
facebook.com/tlrproducts